
Dragonfish Standard

Quick Start Guide

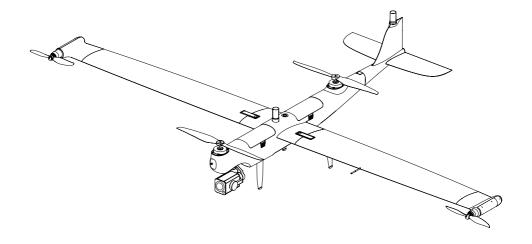

Contents


Item list	2
Getting to know the aircraft	3
Getting to know the mobile ground station	···· 4
Getting to know the base station	4
Using the Dragonfish Standard aircraft	5
Charging	5
Setting up the base station	5
Assembling the aircraft	6
Powering on / Activating the aircraft	8
Powering on the base station	8
Powering on the ground station	8
Powering on the aircraft	8
Activating the aircraft	8
Flight	9
Activating the aircraft	9
Automatic takeoff	10
Specifications	11

Item list			
	Aircraft body		9.7 inch ground station x 1
	Base station x 1		Battery x4 (the actual quantity is subject to the purchased set)
	Charger + AC line	9 9 9	Propeller blades
	Base station antenna x 2		Base station feeder × 2
	Base station tray		Base station tripod x 1
	Base station charger		USB Type-C cable
	Repair tool kit		Gimbal Camera x 1 (The gimbal model is subject to the actual set purchased)
	Wing set	10 5000 000	Ground station lanyard × 1
	Tail x 1		Propeller holder x 2
©	Airspeed indicator cover x 1		TF card
	Tail Rubber Cover		Documentation x 1set (includes Dragonfish Standard, Base station, Charger, Battery quick guide, Disclaimer)

Getting to know the aircraft

The Dragonfish Standard aircraft integrates intelligent and superior flight control technology, gimbal technology, and imaging technology. The aircraft boasts a new tilt rotor design that combines the efficiency of fixed-wing aircraft endurance with the takeoff convenience of traditional multi-rotor drones. A 5 second self-check system ensures the aircraft is safe and ready for operation. It can be assembled quickly, enabling set up and take-off in a matter of minutes. The Dragonfish Standard offers a maximum flight time of up to 126 minutes and a video transmission range of 30 km. It comes built in with a range of intelligent features such as automatic take-off and landing, intelligent tracking, terrain follow and more.

Tough and reliable, the Dragonfish Standard has an IP43 protection rating to enable operations across a variety of terrains. It also features a modular payload mount with an integrated quick release function that enables operators to mount a dual sensor, a triple sensor, or a multispectral payload effortlessly to suit mission needs. Alongside the aircraft is a GNSS Base Station and the integrated, Dual RTK modules that equip the aircraft with additional redundancy. This allows the Dragonfish Standard to fly confidently in complex environments while capturing precise, centimeter-accurate data.

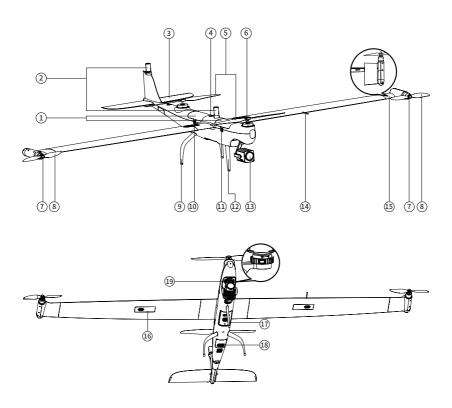


- 1. Smart battery
- 2. RTK antenna
- 3. Horizontal stabilizer
- 4. Power button/indicator
- 5. Propeller blades
- 6. Body motor
- 7. Wing motor

- 8. Wingtip propellers
- 9. Rear landing gear
- 10. Wing lock
- 11. Battery release button
- 12. Front landing gear
- 13. Gimbal camera
- 14. Airspeed sensor


- 15. Tilting wingtip
- 16. GPS module
- 17. Ultrasonic Positioning Sensors
- 18. Dust Net
- 19. PTZ installation interface

Getting to know the portable ground station

The Dragonfish Standard is equipped with a 9.7-inch TFT-LCD touch screen (2048*1536). It offers a brightness of 1000 cd/m2, making it almost twice as bright as typical mobile devices. The screen can display images clearly even in direct sunlight, and a built-in 256G memory makes it convenient for storing all your critical data. With an image transmission range of 30km^[1] and a battery life of 4.5 hours, the ground station guarantees optimal performance and reliability.

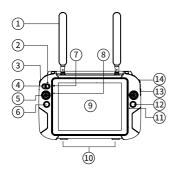



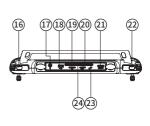


- 1. Antenna
- 2. Mode switch indicator
- 3. Gimbal pitch control wheel
- 4. Manual/Auto mode switch key
- 5. Joystick
- 6. Home button
- 7. Power status indicator
- 8. Light perception sensor

- 9. Touch screen
- 10. Hooks (for lanyard support)
- 11. Microphone
- 12. Photo/Video button
- 13. Zoom button
- 14. Gimbal level control dial
- 15. Tripod mounting interface
- 16. Power button


- 17. Charging port
- 18. USB port
- 19. SD card slot
- 20. SIM card slot
- 21. HDMI port
- 22. Custom buttons
- 23. Headphone jack
- 24. Air outlet

Getting to know the base station

The Dragonfish base station is a high-precision satellite signal receiver that supports GPS, Beidou, Galileo and GLONASS navigation systems. It can be used across a variety of applications and environments. The Dragonfish base station and the integrated Dual RTK modules equip the aircraft with additional redundancy and positioning accuracy to provide precise, centimeter accurate data. It also enables the Dragonfish Standard to withstand signal interference in strong magnetic environments such as power lines and near buildings.

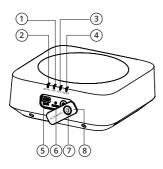

- 1. WiFi indicator
- 2. Linking indicator
- 3. RTK indicator
- 4. Power indicator

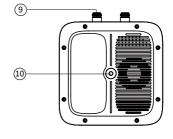


- 5. Charging port
- 6. Frequency button
- 7. Power button

- 8. Port cover
- 9. Antenna interface
- 10. Tripod interface


Using the Dragonfish Standard

Charging

 1. Charging the Intelligent flight battery



2. Charging the ground station

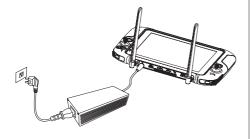


Setting up the base station


1. Unfold the tripod, install the base station tray, and lock the tray.




Install the base station body to the tray and tighten the lock on the tray nut. Ensure that the base station is level and stable.

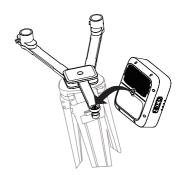

 
3. Charging the base station





3. Install the antenna on the tripod and connect the antenna feeder to the base station antenna port.

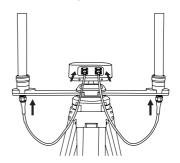

Assembling the aircraft

 


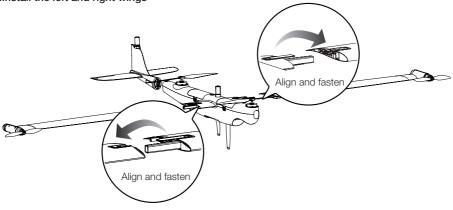

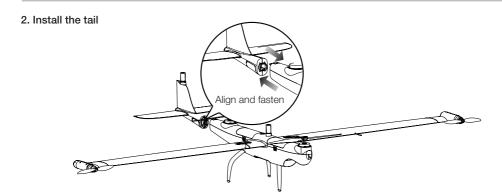

3. Install the wingtip propeller

 Before installing or removing the propeller, power off the aircraft (as shown in the illustration).



Mount on the base

Press and rotate the paddle

Install to the locked position

■ Locking direction: Press and Rotate in the indicated direction to lock the propeller.


→ Unlocking direction: Press and Rotate the propeller in the opposite direction to unlock it.

The marked propeller is to be mounted on the marked motor

Unmarked propeller is to be mounted on the unmarked motor

4. Mounting

Align the red dots on the mount with the red dots of the gimbal interface of the fuselage, and rotate the lock ring to the locked position.

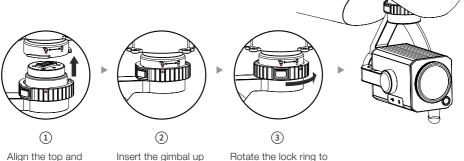

bottom red dots

Insert the gimbal up vertically into the slot


Rotate the lock ring to the locked position

5.Unlock mount



6. Installing the Intelligent Flight Battery

When installing or removing the aircraft battery, be sure to power off the aircraft.

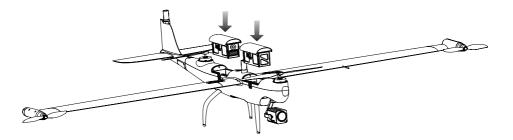


• Align the battery to the battery interface on the fuselage and install it.

Powering on / Activating the aircraft


1. Powering on the base station

 Short press the power button for 1 second to turn on the base station.



2. Powering on the ground station

Short press the power button for 1 second to turn on the ground station.

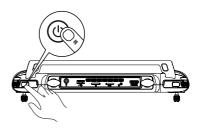

3. Powering on the aircraft

Press the power button on the aircraft body for 3 seconds to power on the aircraft.



4. Activating the aircraft

Open the APP and click the activation button to activate the aircraft.




Flight


Enter the APP safe flight interface. Before taking off, please place the aircraft on a flat surface with the tail facing towards you.

Manual takeoff


① Switch the ground station gear to M gear.

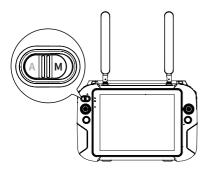

② Check the aircraft system status.

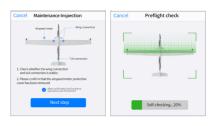

③ Simultaneously move the joystick in inwards or outwards and hold for 2 seconds to arm the motors.

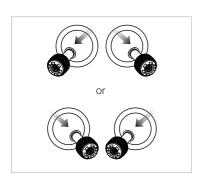

4 Push up the left stick (mode 2) to take off.




^{*}Non-professionals are not recommended to use manual mode

Flight

Enter the APP safe flight interface. Before taking off, please place the aircraft on a flat surface with the tail facing towards you.

Automatic takeoff


① Switch the ground station gear to A gear

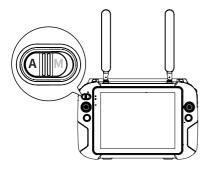

② Click the Create Mission button to plan the mission



 3 Aircraft system status check



4 Flight interface display



Specifications

Aircraft

Size 2.3*1.29*0.46 m Weight (including two batteries, without gimbal) 7 kg Single battery weight 1.3 kg Maximum load 1.5 kg Maximum take-off weight 8.5 ka Working frequency Video Transmission 902-928 MHz (Only for FCC/ISED); 2.4000-2.4835 GHz: 5.150-5.250 GHz (Only for FCC/ISED): 5.725-5.850 GHz Data Transmission 5.729-5.771 GHz EIRP (Equivalent radiated power) 900MHz FCC/ISED: < 30 dBm: 2.4 GHz FCC/ISED/RCM: < 30 dBm CE: < 20 dBm: 5.2 GHz FCC/ISED: < 25 dBm 5.8 GHz FCC/ISED/RCM: < 26 dBm CE: < 14 dBm Hovering accuracy (P-GPS) Vertical: ±0.1 m (when the visual positioning is working normally) ±0.5 m (when GPS is working normally) ±0.1 m (when RTK positioning is working normally) Horizontal: ±0.3 m (when visual positioning is working normally) ±1.5 m (when GPS is working normally) ±0.1 m (when RTK positioning is working normally) RTK positioning accuracy During RTK FIX Mode:

1 cm + 1 ppm (horizontal)

1.5 cm + 1 ppm (vertical)

Maximum rotational angular velocity Pitch axis: 180°/s

Yaw axis: 60°/s

Maximum pitch angle 20°

Maximum roll angle 35°

Maximum ascent speed Vertical flight mode: 4 m/s

Fixed-wing flight mode: 5 m/s

Maximum descent speed (vertical)

Vertical flight mode: 3 m/s

Fixed-wing flight mode: 5 m/s

Maximum horizontal flight speed 30 m/s

Maximum service altitude 6000 m

Maximum wind resistance During fixed-wing flight: 15 m/s (level 7 wind)

Vertical take-off and landing: 12 m/s (level 6 wind)

902-928 MHz (Only for FCC/ISED);

2.400 - 2.4835 GHz

5.650 - 5.755 GHz

5.150 - 5.250 GHz (Only for FCC/ISED)

Maximum flight time 126 min

Supported Payloads DG-Z2, DG-T3, DG-T3H, DG-L20T

Supported Gimbal Configurations Fast Disassembly

Ingress Protection Rating IP43

GNSS GPS+GLONASS+BeiDou+Galileo

Working temperature -20° C to 50° C

Working frequency

Working efficiency

9.7 inch ground control station

Image transmission

parameters:		2.4000-2.4835 GHz; 5.150-5.250 GHz (Only for FCC/ISED); 5.725-5.850 GHz
	Maximum transmitting distance (unobstructed, free of interference)	FCC:10 km CE / MIC:5 km
Digital transmission	Working frequency	5.729-5.771 GHz
Wi-Fi parameters:	Protocol	Wi-Fi Direct, Wireless; Display;
		802.11a/g/n/ac; Wi-Fi with 2×2 MIMO

5.725 - 5.850 GHz

Other parameters: Battery Name: Lithium polymer

Battery Capacity: 8200mAh

Voltage: 11.4 V Battery type: Li-Po Energy: 93 Wh

Charging time: 120 minutes

Battery life Approximately 3 hours (maximum brightness)

Approximately 4.5 hours (50% brightness)

Storage ROM 256GB + expandable (support TF card)

HDMI interface

Video output interface

USB-A interface supply voltage/current 5V / 500 mA

Working temperature -20°C to 40°C

Storage temperature -20°C to 60°C (within one month)

-20°C to 45°C (within three months)
-20°C to 30°C (within one year)

Charging environment temperature 0°C to 45°C

Satellite positioning module GPS+GLONASS+Galileo

Size 319×233×74 mm (antenna folded)

319×398×74 mm (antenna expanded)

Weight 1987 g

Base station

GNSS receiver Satellite receiving frequency Simultaneously receive:

GPS: L1, L2, L5 BeiDou: B1, B2, B3 GLONASS: F1, F2 Galileo: E1, E5A, E5B

Positioning accuracy Single Point

Horizontal: 1.5 m (RMS) Vertical: 3.0 m (RMS)

RTK

Horizontal: 1 cm+1 ppm (RMS) Vertical: 1.5 cm + 1 ppm (RMS)

1 ppm: For every 1 km increase in distance,

the accuracy will be 1 mm less.

For example, the horizontal accuracy is 1.1 cm when the receiving end is 1 km away

from the base station.

	Positioning update rate	1 Hz, 2 Hz, 5 Hz, 10 Hz and 20Hz
	Cold start	< 40 s
	Hot Start	< 10 s
	Recapture Initialization reliability	< 1 s
	Initialization reliability	> 99.9%
	Differential data transmission format	RTCM 2.X/3.X
Communication	Data link	Image transmission, Wi-Fi
Image transmission parameters:	Working efficiency EIRP (Equivalent radiated power)	902-928 MHz (Only for FCC/ISED); 2.4000-2.4835 GHz; 5.150-5.250 GHz (Only for FCC/ISED); 5.725-5.850 GHz 900MHz
		FCC/ISED: < 30 dBm; 2.4 GHz FCC/ISED/RCM: < 30 dBm CE: < 20 dBm; 5.2 GHz FCC/ISED: < 25 dBm 5.8 GHz FCC/ISED/RCM: < 26 dBm CE: < 14 dBm
WIFI parameters:	Working efficiency	5.725-5.850GHz
	EIRP (Equivalent radiated power)	5.725-5.850GHz
		FCC/ISED/RCM: < 26 dBm;
		CE: < 14 dBm
	Communication distance	Base station and aircraft: 30km (FCC) Base station and ground station: 200m (FCC) (Unobstructed and free of interference, when the mobile station is used as a base station and the distance from the mobile station antenna to the bottom of the tripod is 2 m; and when the difference in height between the remote controller and mobile station is less than 10 m, and when the remote controller is 1.2 m from ground level)
Electrical characteristics	Power consumption	7.5 W
	Power supply	5 to 20V DC
	Battery	Type: Lithium polymer battery Capacity: 4950 mAh Energy: 57.1 WH

	Runtime	>7.5 h
Physical properties	Dimensions (base station body + extension pole)	193 mm×177 mm×73 mm
	Weight	1275 g
	Ingress protection	IP64
Working temperature		-20°C to 50°C