

## VC Indicator Alarm Light and RS232 Connction

### Alarm Light Cable Connection

Main Board J_alarm Connector	DB9 Connector	Alarm Light Relay Connection
VB	Pin 1	VB
GND	Pin 5	GND
LOW	Pin 6	IN4
OK	Pin 8	IN1
HI	Pin 7	IN2

### RS232 Cable Connection

Main Board ISP Connector	DB9 Connector	RS232 Output
RXD	Pin 2	Pin 2
TXD	Pin 3	Pin 3
GND	Pin 5	Pin 5
VCC	Pin 4	Pin 4

PS: Only one GND connection is required if it's connecting RS232 and Alarm light connection

Connectors:

Main Board

Alarm Light:

