TILT II & QUICK-CHECK® TRANSFORMER & CAPACITOR TESTERS

Operating & Instruction Manual




HDE HD ELECTRIC COMPANY

1475 Lakeside Drive • Waukegan, Illinois 60085 U.S.A. • 847.473.4980 fax 847.473.4981 • website: www.HDElectricCompany.com

TILT II & QUICK-CHECK

TRANSFORMER & CAPACITOR TESTERS

INFORTANT SAFETY INFORMATION
OPERATING INSTRUCTIONS 4-8
PRE-USE INSPECTION
TESTING SINGLE PHASE TRANSFORMERS 5
TESTING CAPACITORS 6
TESTING THREE PHASE TRANSFORMERS 6
TESTING DISTRIBUTION VOLTAGE REGULATORS 8
TESTING DISTRIBUTION TRANSFORMERS FROM METER SOCKETS 8
CARE AND MAINTENANCE
REPAIRS9
TECHNICAL SPECIFICATIONS
TERMS AND CONDITIONS OF SALE

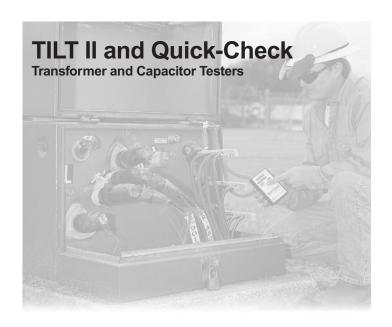

IMPORTANT SAFETY INFORMATION

WARNING: The TILT II and Quick-Check Transformer and Capacitor Testers should be used only on equipment known to be deenergized and/or discharged.

CAUTION: Use on the secondary side of transformers may generate high voltages on the primary side. Stay clear of all primary connections while testing.

The Quick-Check Transformer and Capacitor Tester will not leave a significant charge on a capacitor.

OPERATIONAL IMPAIRMENT: If the Testers are used in a manner not described in this instruction manual, the protection and effective operation of this equipment may be impaired.

INTRODUCTION

The TILT II and Quick-Check Transformer and Capacitor Testers are versatile tools for quick and easy checks of transformers and the connections made to them. The Quick-Check Transformer and Capacitor Tester also tests power capacitors and capacitor banks. The transformer connections can include bundled secondaries or a cable run from the transformer to the meter.

In the field, the testers are used to test the primary and secondary sides of new or reworked, single or three phase transformer installations. The Quick-Check Transformer and Capacitor Tester also tests capacitor banks for short or open circuits prior to energizing.

In the shop the testers are used for quick screening of incoming and outgoing transformers (including their internal fuses and breakers). The Quick-Check Transformer and Capacitor Tester also tests capacitors for both shorts or opens. Both testers test 1Ø and 3Ø transformers including PT's and other instrument transformers, and the Quick-Check Transformer and Capacitor Tester tests power capacitors in almost any size.

HOW THEY WORK

The Testers are used in the field for testing connected transformers, their connected primary and secondary leads and the Quick-Check Transformer and Capacitor Tester for power capacitors, individually or in banks, for both shorts or opens. Unlike a simple ohmmeter, the Testers use a high frequency, low voltage signal to measure transformer winding inductance (and power capacitor capacitance) and they can differentiate true shorts from other low resistance windings or connected equipment such as meters.

NOTE: The TILT II and Quick-Check Transformer and Capacitor Testers will not detect a partially shorted transformer coil or an improper transformer ratio. They will not detect a capacitor with a partial short or open.

PRE-USE INSPECTION

Before using the Testers to test a transformer or capacitor, test the instrument itself using the built in TEST terminals on the right side of the unit. With the test leads disconnected from any equipment and from each other, press the TEST button. The OPEN light should flash. If it does not, replace the battery. Next, short the test leads together and press the TEST button. The SHORT light should flash. Now touch the right test lead to the right side test terminal labeled TRANSFORMER and press the TEST button. The TRANSFORMER O.K. light should flash and the beeper should be heard.

For the Quick-Check Transformer and Capacitor Tester, touch the right test lead to the right side test terminal labeled CAPACITOR and press the TEST button. The CAPACITOR O.K. light should flash and the beeper should be heard.

TESTING SINGLE PHASE TRANSFORMERS

For single phase transformers, use these figures as guidelines to get started. For 3Ø transformers the test leads are connected from each phase to neutral and across each pair of phases.

When all connections are proper and the transformer itself is good, the Tester will beep and show TRANSFORMER O.K.


The OPEN indication designates a bad connection or an open transformer winding. A SHORT indication designates a short from phase to neutral or phase to phase in the transformer or the connections to it

NOTE: Disconnect primaries or remove primary fuses before testing secondaries.

For the Quick-Check Transformer and Capacitor Tester and power capacitors, tests across the two bushings should show CAPACITOR O.K. On a single bushing capacitor tests from bushing to ground will also show CAPACITOR O.K. On a two bushing capacitor, tests from bushing to ground should show OPEN.

As a quick test in the shop, the Testers can be used to screen transformers by checking both primary and secondary windings and connections. Test for SHORTs on both primary and secondary windings and from primary to secondary. Test for OPENs on both primary and secondary windings to check for open windings or open breakers and fuses. Tests for power capacitors with the Quick-Check Transformer and Capacitor Testers are performed across each bushing and from bushing(s) to ground.

Test Connections

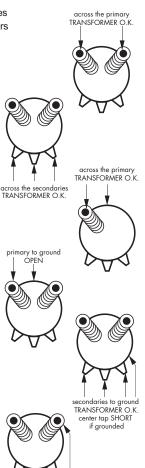

from primaries to

TRANSFORMER O.K. if both primary and secondary have one grounded bushing

secondaries OPEN

TESTING CAPACITORS

These instruments are intended for quick and simple testing of transformers or capacitors and the connections made to them. Do not energize visibly damaged equipment such as a transformer leaking oil or a bulged capacitor even if the Testers give an O.K. reading.

The Testers are powered by an internal 9V lithium or alkaline battery. It is easily and quickly replaced by removing the battery cover on the back of the unit.

WARNING: The Testers should be used only on equipment known to be deenergized and/or discharged.

CAUTION: Using the Testers on the secondary side of transformers may generate high voltages on the primary side. Stay clear of all primary connections while testing.


The Quick-Check Transformer and Capacitor Tester will not leave a significant charge on a capacitor.


NOTE: For user safety there is a non-replaceable 600V internal fuse inside the instrument. If the instrument is connected to an energized transformer, the fuse will blow. The instrument must then be returned to the factory for repair.


TESTING THREE PHASE TRANSFORMERS

The TILT II and Quick-Check Transformer and Capacitor Testers should be used only on equipment known to be deenergized. Using the Testers on the secondary side of transformers may generate high voltages on the primary side. Stay clear of all primary connections while testing.


Test Connections for Quick-Check Transformer and Capacitor Testers Only

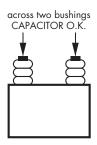

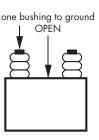


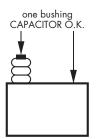

For 3Ø transformers, the test leads are connected from each phase to neutral and across each pair of phases. When all connections are proper and the transformer itself is good, the Tester will beep and show O.K. The OPEN indication designates a bad connection or an open transformer winding. A SHORT indication designates a short from phase to neutral or phase to phase in the transformer or the connections to it.

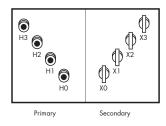


For Y (wye) connections, test the primary and secondary sides of the transformer as follows:

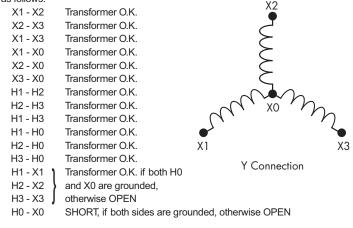

For Δ (delta) connections, test the primary and secondary sides the same as the Y (wye) except omit the connections to X0 and H0.

The TILT II and Quick-Check Transformer and Capacitor Testers will not detect a partially shorted transformer coil or an improper transformer ratio. They are intended for quick and simple testing of transformers and the connections made to them.

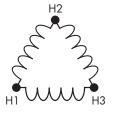


Delta Connection

TESTING DISTRIBUTION VOLTAGE REGULATORS

For typical distribution voltage regulators, test using these figures as guidelines. Both the line and load bushings tested to ground should indicate the reading shown in the figures. With the regulator in the neutral position, the line and load are internally connected with the resulting IDAM SHORT.

load to ground TRANSFORMER OK

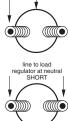

line to ground TRANSFORMER OK

TESTING DISTRIBUTION TRANSFORMERS FROM METER SOCKETS

An overhead or underground distribution transformer can sometimes be more conveniently tested from a meter socket served by that transformer.

Transformer and Capacitor Testers should be used only on equipment known to be deenergized. Test both the load and source sides of the meter socket for the presence of voltage before using the Tester.

Using the Tester on the secondary side of transformers may generate high voltages on the primary side. Stay clear of all primary connections while testing. The Quick-Check Transformer and Capacitor Tester will test the secondary side of a transformer connected to the meter socket. Connect the Tester across the two source side receptacles and from each receptacle to ground and test.

NOTE: This procedure will not work if other loads are connected to the same transformer.

The wiring on the load side of the meter socket going into the main breaker can also be tested for shorts or crossed phases. Connect the Tester across the two load side receptacles and from each receptacle to ground. The absence of shorts or crossed phases will be indicated by an OPEN reading. If the main breaker is not open, connected loads within the building may cause a SHORT or TRANSFORMER O.K. indication.

The meter socket connections shown are typical. Local standards may specify different connections.



CARE AND MAINTENANCE

STORAGE - It is recommended for protection of the TILT II and Quick-Check Transformer and Capacitor Tester that it is stored in the carrying case.

CLEANING INSTRUCTIONS - To clean, wipe with a damp cloth with water. Do not use harsh chemicals or solvents.

DAMAGE - If you suspect any mechanical or electrical damage, do not use and arrange for repair by returning to the factory.

CALIBRATION & TESTING - Regular calibration is not required. There is no calibration adjustment.

REPAIRS

All repairs are performed at HD Electric Company. If any damage is found please contact HD Electric Company at 847-473-4980 to arrange for service.

WARNING: Use Only on Equipment Known to be Deenergized and/or Discharged Test this tool before each use. Touch the right test lead to each of the two test terminals in turn, push the TEST button and verify proper operation of the corresponding lights. Test for OPEN by leaving the leads open. Test for short by shorting the leads. The beeper will sound when a green OK lights is on.

Connect the test leads to the device under test. Push the test button and observe the lights. An OK indication verifies no direct shorts or opens. OPEN indicates an open connection or high resistance leakage path. SHORT indicates a very low resistance.

Using this tool on the secondary side of transformers may generate high voltages on the primary side. Stay clear of all primary connections while testing. Refer to instructions. Check the battery if unit fails to operate. Replace with 9V alkaline or lithium types. Contains a 600V fuse which is not replaceable. Return to factory for service. Maximum output voltage 6VDC.

DANGER: Failure to follow these directions or the instructions may expose the user to high voltage, severe injury or death.

HD Electric Company, Waukegan IL. USA www.HDElectricCompany.com

US Patent 6,130,530 4/16

TL-MAN-N, TL-MAN-M, QC-MAN-N, QC-MAN-M, QC-MAN-N, QC-MAN-M, QC-MAN-M,

TECHNICAL SPECIFICATIONS

MODELS

TL-MAN-N. TL-MAN-M. QC-MAN-N. QC-MAN-M

DIMENSIONS

3.6 in. W x 5.7 in. L x 1.2 in. H (9.1 cm x 14.5 cm x 3.0 cm)

WEIGHT

TL-MAN-N / QC-MAN-N - 1lb., 1oz. (0.47 kg)

TL-MAN-M / QC-MAN-M with magnet - 1lb., 2 oz. (0.51 kg)

BATTERY

9V alkaline ANSI 1604A, IEC 6LR61 or 9V lithium, ANSI-1604LC

OUTPUT VOLTAGE: 6VDC maximum pulsed at 50Hz nominal

SHORT: $\leq 10\Omega$, varies with battery voltage

OPEN: $\geq 10\Omega$, varies with battery voltage

TRANSFORMER O.K.: minimum inductance 800µH

CAPACITOR O.K.: (Quick-Check Transformer and Capacitor Tester only)

minimum capacitance 0.5µf maximum capacitance 300uf

AUDIO OUTPUT: 85db at 30cm

ENVIRONMENTAL CONDITIONS

CONDITIONS: Indoor and outdoor use

ALTITUDE: Up to 6,566 ft. (2000M)

OPERATING TEMPERATURE: -20°F to +140°F (-29°C to +60°C)

HUMIDITY: 95% to +60°C (non-condensing)

POLITION DEGREE: PD2

OVERVOLTAGE CATEGORY: II Non-contact

ENCLOSURE MATERIAL: ABS UL 94-HB

PRINTED CIRCUIT BOARDS: FR-4 UL 94-V0

BATTERY REPLACEMENT INSTRUCTIONS

To replace the battery, open the compartment on the bottom of the housing. Remove and dispose of the old battery, replacing it with a fresh, new 9-volt lithium or alkaline battery.

MANUFACTURING LOCATION

HD Electric Company • Waukegan, IL. 60085, USA

TERMS AND CONDITIONS OF SALE

HD Existic Company is been referred to either as THE 0° "Shef" and the customer or person or entity purchasing product or revinines Deministrate collectivity referred to as "Goods") is referred to as "Buyer". These and Conditions, any price sit or stebules, quadrious, advantues/entered in revinit or less self or Recode and all documents in companied by peofice memories been companied and exclusive statement of the terms of the agreement governing the safe of Coods by HDE 06 byers (Buyer's acceptance of the Coods will instructed buyer's assent to these terms and conditions without variation or addition. Any different or additional less mis buyer's assent to the extract the cool and all documents are the review of the cool and all concepts the regist in the size described in the Fill control and the control of the cool and all concepts the regist in the size described in the Fill control and the regist in the size described in the Fill control and the regist in the size described in the Fill control or size of the regist in the size described in the Fill control and the register to reflect or size.

- 1. PRICES AND TAXES: Unless a fixed price is quoted, the price at which this order is accepted is subject to adjustment to HDE's price in effect at the time of order. Any current or future tax or governmental charge (or increase in same) affecting Seletie's coats or production, sale or delivery or which Seletie is deliverise required to pay or collect in correction with the sale, purchase, delivery, storage, processing, use or consumption of Goods (but excluding any stor, or Seleti's an increase or profit) shall be for buyer's account and shall be added to the price.
- 2. TERMS OF PAYMENT: Terms are stated on HDEs invoice in U.S. currency, HDE shall have the right, among other remedies, either to terminate this agreement or to suspend unter performance under this and/or other agreements with the Buyer in the event Buyer fails to make any symmet when due, which other agreements blayer and Selfer bready amend accordingly, or HDE otherwise deems better insecure. Buyer shall be liable to risk expresses, including allowing feet, excluding to be ordered on past due amounts. Should Buyer, famical responsibility forecome unsatisations, but HDE. Card payments or security, statedors, but FDE may be required by the PDE for the advanced and the proofs therefore delivered. If such cash payment or security is not provided, in addition to HDE's other rights and remedies, HDE may discontinue deliveres. HDE may apply a finance device and for the pools therefore delivered. If such cash payment or security is not provided, in addition to HDE's other rights and remedies, HDE may discontinue deliveres. HDE may apply a finance device for semment such by order (and the provided and the provided continued delivered.)
- 3. SHPMENT AND DELIVERX*! Unless otherwise expressly provided, stigments are made F.O.B. NEX is slipping port. Risk of loss or drange and responsibility shall pass from INEX to Day you not elivery but and receipting by common canter. Any claims for shringes are stilled in standards and segmentated to advanced and signed services are standards or the standards of the standards of the standards or the standards of the standards or the standards o
- 4. HOE LIMITED WARRANTY: HIG covers by products with a manufacture's surranty against defects in material or undirection or a period of lan years in the case of Capacidor Controls and in all other circumstance for a particul data requires defending the understanding the surranty, the complete posture man be delivered period to HIG or any HIG Anthorised Service Control is not as a price of the price of the
- THE FORECOME CONSTITUTES HOE'S SOLE WARRANTY RESPONSIBILITY AND BUYERS SCILLISIVE REMEDY WHETHER SOLURING IN TORT, CONTRACT, STRECT LIBBLITY OR OTHERWISE, EXCEPT AS OTHERWISE EXPRESS IY SET FORTH IN THIS AGREEMENT. THERE ARE NO OTHER WARRANTIES, EXPRESS OR MPLIED, WHETHER OF MERCHANTABLITY, FITNESS FOR A PARTICULAR PURPOSE OR OTHERWISE. No employee, agent, dealer, or other press in a subroized to give any warranty on bellad of HOE. This warranty extends only to person or organizations who purchase the Goods from HOE for reside.
- S. LIMITATION OF REMEDY AND LIABILITY. THE SOLE AND EXCLUSIVE REMEDY FOR REPGALOF ANY WARRANTY NEREWORDS SHALL BE LIMITED TO REPAIR, CORRECTION, REPLACEMENT OR CERTIFICIAN 4 (RES WHALL FOR STANDARD 4 (RES WHAT A PROPERTY AND A PROP
- 4. EXCUSE OF PERFORMANCE (PIOCE MALEURE): HCE that not be label for kighs in performance of the to bett of Cod, and of Buyer sax: first, food, wealther, adobtops, shifess, label displace, of identification or rich government aspects, medicion, allocation, label, or display in superformance may be used to include the proper state of the performance may be used to a personal proper state or other performance may be used to the perfo
- 7. CHANGES: HDE reserves the right to change designs and specifications for standard Goods without prior notice to Buyer, but not with respect to custom Goods being made for Buyer. HDE shall have no obligation to install or make such change in any Goods manufactured prior to the date of such change.
- 8. ASSIGNMENT: Buyer shall not assign its rights or delegate its duties hereunder or any interest herein without the prior written consent of HDE, and any such assignment, without such consent, shall be void.
- 9. INSTALLATION: Buyer shall be responsible for receiving, inspecting, testing, storing, installing, starting up and maintaining all Goods
- 14. INSPECTION/TESTING: Buyer, at its expense, agree that full promptly inspect the Cooks upon excipt fewerf, and in no went later than thirty ((0)) days from the date of excipt of the Cooks. Buyer shall deliver to ICE with fillers (1) by get in projection, but in one well taked than bely exist (6) days from the date of excipt of the Cooks, within rode or a great all disclarations, deliveration from specialization or requisitation or requisitation or requisitation or requisitation or requisitation or requisitation and the special to the quantity, quality, contilion, shipment, performance, price or appearance of the Cooks or received by Buyer. In the event no such written notice is received by ICED. Buyer exhall be deemed concludely in these respected and excepted at all concluded and concepted and excepted and excepted at all concluded and concepted and excepted a
- 11. SERVICES: If this agreement requires HDE to perform or provide any services, HDE (including without limitation its successors, assigns, agents or any person or entity acting at HDE's direction) shall not be responsible for any damages, claims, liabilities or expenses of any nature arising out of such services.
- 12. U.S. EXPORT CONTROL LAWS: All Goods sold to Buyer by HDE hereunder are subject to U.S. Export Control Laws. Buyer hereby agrees not to re-sell or divert any goods contrary to such laws
- 13. COMPLIANCE: Select Contractor that comply with all agriculate fectors, state or local teas, rules, regulations, or others. Select Contractor that comply with all agriculate fectors, state or local teas, rules, regulations, or others. Select Contractor that comply with a placeful feetor at the teas of the contractor of the contract
- 14. MISCELLANEOUS: These terms and conditions supersedue at other communications, negotiations and prior or or or written statements regarding the subject natural horizons. No change, modification, rescisions, discharge, and advantagement of these terms and conditions super laws power point for unless make the writing and signed on the betterly its day all uniform depresentatives. No change or trade, counter defending or performance, understanding or agreement purporting to modify, vary, explain, or supplement these terms and conditions that be binding unless themselves and supplement of playing supplement of playing and unique to the superior of playing superior of playing superior of playing supplements or desirable playing the subject of playing superior playing sup

15. DISPUTE RESOLUTION: In the event of any dispute INCLIDING, BUT NOT LIMITED TO, BREACH OF CONTRACT, BREACH OF WARRANTY, CLAMS BASED IN TORT, NEGLIGENCE, PRODUCT LIMBLITY, FRULD, MRRETING, STATE OR FEDERAL REGULATIONS, ANY CLAMS REGARDING THE ENFORCEMENT OF THIS LIMITED WARRANTY, AND THE WAVER OF CLASS ACTION TRIAL Settemen Buyer and Seller, either my clambe breacher the designed by brinding subtraction, as described below, the MEMBER OF SETTLES PROVINCE OR SELLER FOR SELLER FO

- Arbitration is not so chosen by Buyer or Seller of all actions arising in connection herewith shall be only in the state of Illinois and the parties agree to submit to such jurisdiction. No action, regardless of form, arising out of transactions relating to the agreement, may be brought by either party more than two (2) years after the cause of action has accrued. The U.N. Convention on Contracts for the International Sales of Goods shall not apply to this averagement.
- - HD Electric Company is committed to ongoing review and improvement of its product lines, and thus reserves the right to modify product design and specifications without notice.
 - HD Electric Company® products are available through HDE® sales representatives worldwide.

Quick-Check Patent No. 6130530 • HD Electric Company is ISO 9001:2015 certified

Printed in U.S.A. © HD Electric Company 2019 • Bulletin No. TILT/QC IM-100g